

FITTING INSTRUCTIONS RECESSED LUMINAIRE WITHIN A SUSPENDED CEILING GRID



1 Remove hood and fittings from packaging, check contents and unfold canopy.




2 Place the hood over the luminaire, aligning cable entry with lighting cable.



3 Thread the cable through the cable entry holes.




4 Secure the hood to the ceiling grid with steel, self tapping screws (min 4mm diameter & 12mm length) by screwing through the hood and into the bulb of the grid at 80mm centres.

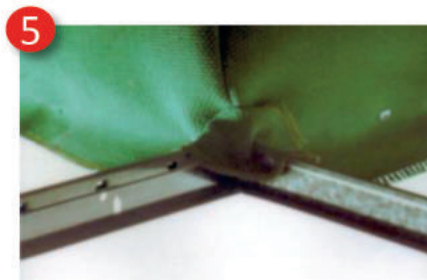


5 Fold the corner tab tightly over the grid section and secure.



6 The hood is now installed.

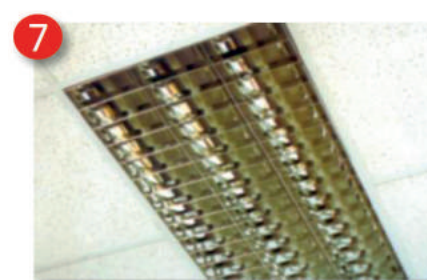

7 Replace the surrounding tiles and finish the installation of the luminaire as recommended by the manufacturer.

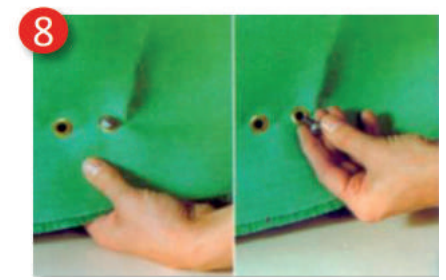

8 All recessed lighting hoods have single and dual cable access. For dual cable access remove the sealing bolt as shown above.