




DO NOT SCALE. IF IN DOUBT ASK!

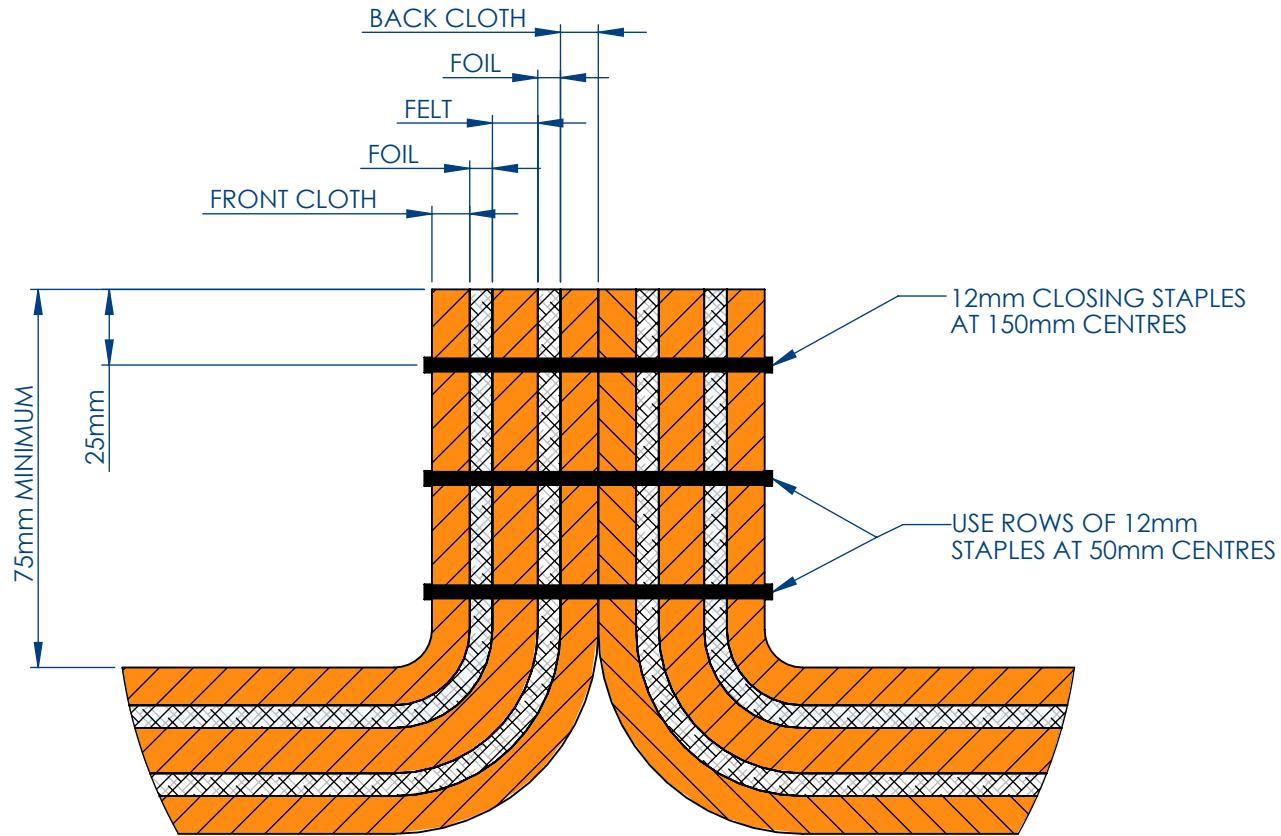

USE 2 ROWS OF 12mm STAGGERED STAPLES AT 50mm CENTRES HORIZONTALLY ALONG AT THE FOLD 50mm FROM THE EDGE OF THE FABRIC. THEN STAPLE CLOSING ROW OF STAPLES AT 150mm CENTRES, 25mm FROM THE EDGE OF THE FABRIC.

ALL RIGHTS RESERVED. NO PART OF THIS DRAWING MAY BE USED, REPRODUCED, ALTERED, STORED IN A RETRIEVAL SYSTEM OR TRANSMITTED IN ANY FORM OR BY ANY MEANS WITHOUT THE PRIOR WRITTEN PERMISSION OF TBA PROTECTIVE TECHNOLOGIES LTD. WHILST EVERY EFFORT HAS BEEN MADE TO COMPLY WITH THE CURRENT STATUTORY REGULATIONS, IT IS THE USER'S RESPONSIBILITY TO ENSURE THAT THE FINAL DETAILING AND INSTALLATION MEETS THE REQUIREMENTS OF RELEVANT REGULATORY AUTHORITY (OFTEN BUILDING CONTROL). PLEASE CHECK www.tbafirefly.com TO ENSURE THAT YOU ARE USING THE CORRECT AND CURRENT VERSION. COPYRIGHT 2019

TBA Protective Technologies Ltd
 Unit 3, Transpennine Trading Estate
 Gorrells Way, Rochdale, OL11 2PX
 United Kingdom
 T: +44 (0)1706 758 817
 E: technical@tbafirefly.com
 W: www.tbafirefly.com



Drawn By: RJ
 Approved By: MPR
 Scale: NTS
 Date: 19/01/20

Title: FIREFLY™ APOLLO LITE™
 VERTICAL BUTT JOINT
 Drawing No. A/008
 Rev: 1