


DO NOT SCALE. IF IN DOUBT ASK!

USE 2 ROWS OF 12mm STAGGERED STAPLES AT 50mm CENTRES.
 THE FIRST STAPPLED ALONG THE FOLD.
 THE SECOND AT 50mm FROM THE EDGE OF THE FABRIC.

FINALLY APPLY A CLOSING ROW OF 12mm STAPLES AT 150mm CENTRES,
 25mm FROM THE EDGE OF THE FABRIC.

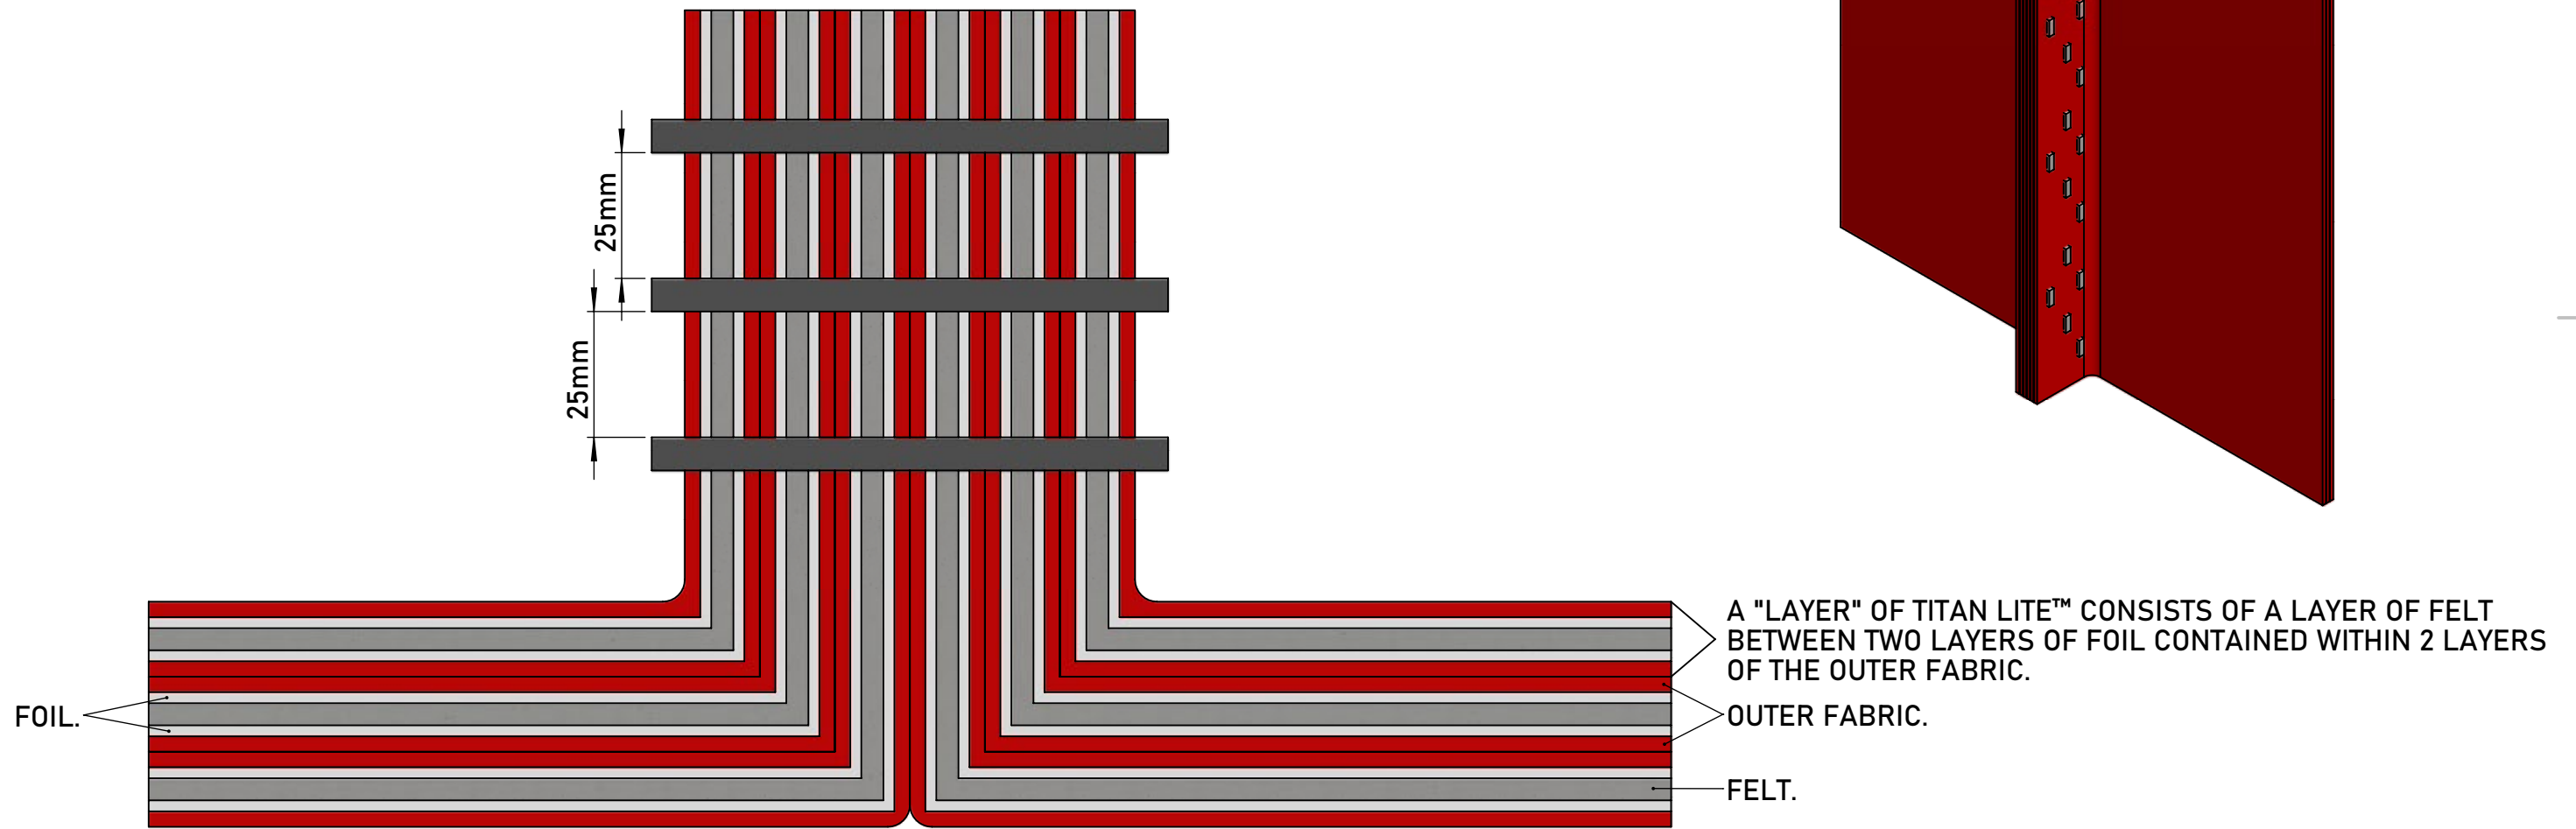

FOIL.

A "LAYER" OF TITAN LITE™ CONSISTS OF A LAYER OF FELT BETWEEN TWO LAYERS OF FOIL CONTAINED WITHIN 2 LAYERS OF THE OUTER FABRIC.

OUTER FABRIC.

FELT.

TITAN LITE™ IS A 3 LAYER SYSTEM AND MUST BE INSTALLED AS SUCH.

TITAN LITE™ - VERTICAL BUTT JOINT

TBA PROTECTIVE TECHNOLOGIES LTD

ARTIST: JC

DRAWING NO:

UNIT 3, Transpennine Trading Estate, Gorrells Way
 Rochdale, OL11 2PX, United Kingdom

APPROVED: DA

T - 005

T: +44 (0)1706 758 817
 E: Technical@TBAFIREFLY.com
 W: www.tbafirefly.com

DATE: 07/12/2022

REVISION: 1

SCALE: NTS

IN SEQUENCE: 1/1

ALL RIGHTS RESERVED. NO PARTS OF THIS DRAWING MAY BE USED REPRODUCED, ALTERED, STORED IN A RETRIEVAL SYSTEM OR TRANSMITTED IN ANY FORM OR BY ANY MEANS WITHOUT THE PRIOR WRITTEN PERMISSION OF TBA PROTECTIVE TECHNOLOGIES LTD. WHILST EVERY EFFORT HAS BEEN MADE TO COMPLY WITH THE CURRENT STATUTORY REGULATIONS, IT IS THE USER'S RESPONSIBILITY TO ENSURE THAT THE FINAL DETAILING AND INSTALLATION MEETS THE REQUIREMENTS OF RELEVANT REGULATORY AUTHORITY (OFTEN BUILDING CONTROL). PLEASE CHECK www.tbafirefly.com TO ENSURE THAT YOU ARE USING THE CORRECT AND CURRENT VERSION. COPYRIGHT 2022

